

<http://www.emulation64.fr>

### Instructions for the Nintendo 64

## Memory Card Plus (P-375A)

The Memory Card Plus plugs directly into the slot located on the underside of the Nintendo 64 controller. To use the Memory Card Plus, slide the cartridge into the slot until it clicks into position. The Memory Card Plus will work with any game that supports the "save to Controller Pak™" option.

NOTE: Removing the Memory Card while saving may cause data loss or corruption.

### **CHANGING UNITS**

The Memory Card Plus has four units. Each unit has the same capacity as a standard Controller Pak, so it is four times bigger than a standard memory cartridge.

To change units, simply slide the switch on the back of the Memory Card Plus.

\*NOTE: You can change units at any time, but we recommend doing so only when the system power is OFF. Some games, such as Gretzky's 3D Hockey, save automatically when you enter the Memory Manager screen. When playing games that save automatically, changing the unit will re-save the information onto the new unit. You will then have a duplicate of the information on the previous unit. This will not happen if you change units when the power is OFF.

Since the Memory Card Plus has a very large storage capacity, you may have difficulty finding your favorite game saves. It is helpful to keep a reference list of the games saved on each unit.





## TROUBLESHOOTING

1. You can view the files saved on the Memory Card Plus in Nintendo 64's Memory Manager. First, turn the system OFF. Next, insert the game you wish to play into the Nintendo 64 video game system. Turn the Nintendo 64 video game system ON while pressing and holding the START button.
2. DO NOT switch units during game play.
3. DO NOT remove the Memory Card Plus while recording information.
4. DO NOT insert the Memory Card Plus into the Memory Expansion port of the Nintendo 64 video game system (insert the Memory Card into the Nintendo 64 controller).

## Maintenance

1. Do not touch the front connectors of the Memory Card Plus directly. Keep the front connectors clean and dry.
2. Do not leave the Memory Card Plus in humid areas or expose to high temperatures.

## Important notes

1. The actual loading and saving of a game is dictated by the software. Please refer to the game manual for the proper loading and saving instructions.
2. The Memory Card Plus will not save the whole game, but will save positions and points earned.



## Interact - Memory Card Plus

If you need additional assistance, please direct all inquiries or requests to:

E-mail: [support@gameshark.com](mailto:support@gameshark.com)

World Wide Web: <http://www.interact-acc.com>

Mailing Address: InterAct Game Products

ATTN: Consumer Services

9611 Pulaski Park Drive, Suite 309

Baltimore, MD 21220

Phone Number: 410-238-1426, weekdays 10:00 a.m. - 8:00 p.m. EST

Nintendo 64 and Controller Pak are trademarks of Nintendo of America, Inc.

