

# Shark Pad Pro 64<sup>2</sup>

<http://www.emulation64.fr>



SV-362

## Introduction

Thank you for buying the SHARK PAD PRO 64<sup>2</sup>, the ultimate digital and analog gamepad for the Nintendo® 64 Entertainment System. The SHARK PAD PRO 64<sup>2</sup> features the traditional eight-way control of most entry-level gamepads, plus the added value of auto-fire and slow-motion.

Your SHARK PAD PRO 64<sup>2</sup> package should include the SHARK PAD PRO 64<sup>2</sup> controller, instruction manual. If you are missing any of these items, Please contact your local dealer.

## Product Description

1. Nine fire buttons (A, B, Z, L, R, ▲, ▼, ◀, ▶)
2. Thumb-controlled digital knob (←, →, ↑, ↓) for directional control.
3. Thumb-controlled analog knob for 3D directional control
4. Individual auto-fire function with LED indicator
5. Slow-motion function with LED indicator
6. Memory card slot (Memory Card not included)

## CUSTOMIZING YOUR SHARK PAD PRO 64<sup>2</sup>

You can customize the color on the top of your Shark Pad Pro 64<sup>2</sup> by gently popping the cover off the slow-motion/ auto-fire section of the controller. Remove the color insert, and insert one of other color strips we have included. Then, gently replace the cover by inserting the front tabs first, and clicking in place.

Emulation64.fr





### How to Program Individual Auto-Fire Function

The SharkPad Pro 64<sup>2</sup> features individual auto-fire for each fire button. To set the auto-fire, press the **AUTO-FIRE** button while pressing the button you wish to set to auto-fire. To cancel individual auto-fire on a button, simply hold down the **AUTO-FIRE** button while pressing down the button you wish to reset.

The auto-fire LED will shine if any fire button is set to individual auto-fire. When a button has been set to auto-fire, the auto-fire LED will flash when that button is pressed.

### How to Set the Slow-Motion Function

The SharkPad Pro 64<sup>2</sup> features a slow-motion function compatible with any game which will allow the **START** on/off button to act as a "pause" button. To set the slow-motion function on your SharkPad Pro, press the **SLOW** button once. To cancel slow-motion, press the **SLOW** button again. When slow-motion is activated, the Slow-Motion LED indicator will flash.

All auto-fire and slow-motion settings will be lost when the SharkPad Pro 64<sup>2</sup> is disconnected from the Nintendo 64 or the system is switched off.

### Care for the Unit & Troubleshooting

The SharkPad Pro 64<sup>2</sup> is an electronic unit, and should be treated with care when handling. InterAct Accessories recommends that you do not disconnect or connect the SharkPad Pro 64<sup>2</sup> to your Nintendo 64 when the system is switched on. We also recommend that you do not store the unit in direct sunlight or at extreme temperatures, or spill any liquids on the unit. Finally, do not open the case of the SharkPad Pro 64<sup>2</sup>. Maintenance and servicing should be done by InterAct Accessories only.

